

POWERED BY e-Tint[®]

uvex

VARIOTRONIC APACHE II • OWNER'S MANUAL

Please follow the care and usage instructions in this manual to ensure optimal performance from your UVEX[®] goggle.

UVEX[®] VARIOTRONIC APACHE II

ADJUSTABLE HEAD STRAP

USB CHARGING PORT

LIGHT SENSOR

ACTIVATION BUTTON

- Single-click for manual ON/OFF mode
- Double-click to change lens color
- Press & hold for 3 seconds for automatic (hands-free) mode
- Adjust the light threshold in automatic mode



DIRECTIONS OF USE

GLOSSARY OF TERMS ACTIVATE: Turn on; lens is tinted when ON | DEACTIVATE: Turn off; lens is clear when OFF

The UVEX[®] Apache II electronic-tinting goggle changes instantly between two levels of tint (on or off) by either a click of the button or automatically via the built-in light sensor. These tint levels are fixed and cannot be adjusted by the user. Three lens colors are included in the system: Red, Blue, and Purple. The goggle comes with a standard light threshold setting for use in automatic mode. You can change the light threshold if you determine that it does not automatically activate or deactivate to your liking (see "Adjust Light Threshold" below).

TO OPERATE IN MANUAL MODE:

Quickly press and release the button to activate or deactivate the tint of the goggle.

TO SET LENS COLOR:

Manually turn on the goggle so the lens is tinted (the lens color can only be changed when the goggle is ON). Rapidly double-click the button to change the lens color. Note: If the goggle turns off during the double-click, then the action was not performed fast enough. Continue double-clicking to cycle through the available lens colors (Red, Blue, and Purple). With the color of choice active, manually turn the goggle off. This will remain the default lens color in manual and automatic mode, until changed.

TO OPERATE IN AUTOMATIC MODE:

The UVEX[®] Apache II goggle can automatically tint in the presence of an activating light. To switch the system to automatic mode, simply press and hold the button for approximately three (3) seconds. The lens will flash once to indicate it has been switched into automatic mode. Release the button. The goggle is now set for automatic use.

TO EXIT AUTOMATIC MODE (AND ENTER MANUAL MODE):

Click the button once to go back to manual mode. Note: The lens will deactivate upon exiting automatic mode.

TO ADJUST LIGHT THRESHOLD:

First, switch the goggle to automatic mode. Choose an area with ambient light that would be similar to where you would prefer the goggle to activate. Stand in your desired lighting condition. Press & hold the button for approximately four (4) seconds. After four seconds, the lens will flash to indicate the system has re-calibrated its sensor to your desired light threshold. Light that is as bright as, or brighter than, your selected ambient lighting will now trigger the sensor. The electronics will store this custom threshold until it is re-adjusted or reset to its factory setting. **NOTE: Be sure to keep the area around the photo sensor clear and open to the light source.** If your finger is covering the light sensor while setting the light threshold, the goggle will stay activated most of the time and only switch when it is very dark. Do NOT attempt to change the light threshold when moving.

FOR A FACTORY RESET:

A factory reset can be performed in either manual or automatic mode. Press and hold the button for approximately nine (9) seconds. The lens will cycle through (2) sets of flashing. After the second set of flashing, the goggle will be restored to its original factory settings.

WARNING! DO NOT USE tinted lenses in the dark. **DO NOT USE** if lenses are scratched. IT IS YOUR RESPONSIBILITY TO DETERMINE THE SUITABILITY OF THIS PRODUCT FOR ITS INTENDED USE. IF AT ANY TIME YOUR GOGGLE IS NOT PERFORMING PROPERLY, DISCONTINUE USE OF THE GOGGLE AT ONCE. NOT RECOMMENDED FOR USE OR STORAGE IN TEMPERATURES BELOW -10°C (14°F) OR ABOVE 45°C (113°F). USE AT YOUR OWN DISCRETION.

CHARGING: Connect the supplied USB cable to goggle and charge with a wall adapter or computer. The lens will tint when charging and turn off when fully charged. A completely depleted battery will take up to two hours to fully charge.

CHARGING STORAGE: If the goggle will be stored for a prolonged period of time, we recommend fully charging the battery every 2-3 months. Doing so will prolong and protect the capacity of the goggle battery.

WARNING! DO NOT CHARGE IF GOGGLE OR USB CABLE HAS BEEN EXPOSED TO EXCESSIVE SWEAT OR MOISTURE. ALLOW UNIT TO DRY (APPROX. 8 HRS.) BEFORE CHARGING. **DO NOT** STORE GOGGLE CONNECTED TO A CHARGING SOURCE FOR AN EXTENDED PERIOD OF TIME.