




CTRL™ XC OWNER'S MANUAL

You may download translated versions of this manual at www.ctrl-eyewear.com or www.e-tintproducts.com. Please follow the care and usage instructions in this manual to ensure optimal performance from your CTRL™ eyewear.

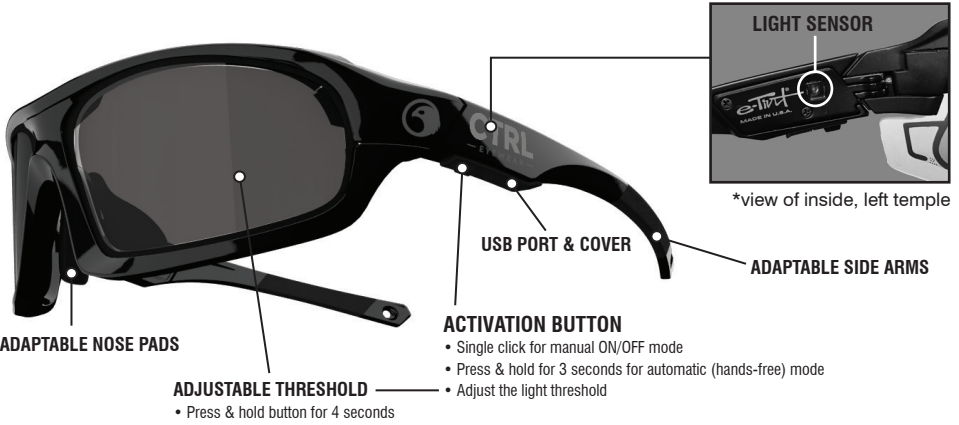

DIRECTIONS OF USE

GLOSSARY OF TERMS ACTIVATE: Turn on; tint | DEACTIVATE: Turn off; clear

CTRL™ electronic-tinting eyewear changes instantly between two levels of tint (on or off) by either a click of the button or automatically via the built-in light sensor. These tint levels are fixed and cannot be adjusted by the user. The eyewear comes with a standard light threshold setting for use in automatic mode. You can change the light threshold if you determine that it does not automatically activate or deactivate to your liking (see "Adjust Light Threshold" below).

TO OPERATE IN MANUAL MODE:

Quickly press and release the button to activate or deactivate the tint of the eyewear.

TO OPERATE IN AUTOMATIC MODE:

CTRL™ eyewear can automatically tint in the presence of an activating light. To switch the system to automatic mode, simply press and hold the button for approximately three (3) seconds. The lens will flash to indicate it has been switched into automatic mode. Release the button. The eyewear is now set for automatic use.

TO EXIT AUTOMATIC MODE (AND ENTER MANUAL MODE):

Click the button once to go back to manual mode. Note: The lens will go clear upon exiting automatic mode.

TO ADJUST LIGHT THRESHOLD:

First, switch the eyewear to automatic mode. Choose an ambient area of light that would be similar to where you would prefer the eyewear to activate. Stand in your desired lighting condition. Press & hold the button for about four (4) seconds. After four seconds, the lens will flash to indicate the system has re-calibrated its sensor to your desired light threshold. Light that is as bright as, or brighter than, your selected ambient lighting will now trigger the sensor. The electronics will store this custom threshold until it is re-adjusted or reset to its factory setting. **NOTE:** Be sure to keep the area around the photo sensor clear and open to the light source. If your finger is covering the light sensor while setting the light threshold, the eyewear will stay activated most of the time and only switch when it is very dark. **Do NOT attempt to change the light threshold when moving.**

FOR A FACTORY RESET:

A factory reset can be performed in either manual or automatic mode. Press and hold the button for approximately six (6) seconds. The lens will cycle through (2) sets of flashing. After the second set of flashing, the eyewear will be restored to its original factory settings.

WARNING! DO NOT USE tinted lenses in the dark. **DO NOT USE** if lenses are scratched. IT IS YOUR RESPONSIBILITY TO DETERMINE THE SUITABILITY OF THIS PRODUCT FOR ITS INTENDED USE. IF AT ANY TIME YOUR CTRL™ EYEWEAR IS NOT PERFORMING PROPERLY, DISCONTINUE USE OF THE EYEWEAR AT ONCE. NOT RECOMMENDED FOR USE OR STORAGE IN TEMPERATURES BELOW -10°C (14°F) OR ABOVE 45°C (113°F). USE AT YOUR OWN DISCRETION.

CHARGING

Gently peel back the micro-USB cover to connect the micro-USB cable into the electronics port. Charge by using either a USB wall adapter or computer. The lens will stay activated while charging and the button will be inoperable. When the battery is fully charged the lens will deactivate. A depleted battery can take up to 2 hours to fully charge. It is recommended to fully charge before each use.

WARNING! DO NOT CHARGE if eyewear or USB cable has been exposed to excessive sweat or moisture. Allow unit to dry (approx. 8 hrs.) before charging. **DO NOT** store eyewear connected to a charging source for an extended period of time.

CLEANING & CARE

Clean with warm water, mild detergent, and a soft cloth. For stubborn residues clean with a household glass cleaner. **DO NOT** use cleaners which contain moisturizers, abrasives, strong acids, or caustics. **DO NOT** immerse the eye-wear in liquids, as this may impact the function of the electronics. **DO NOT** leave this product in direct sunlight when not in use. Doing so will degrade the longevity of your eyewear.

RETURN POLICY

If you need warranty/repair service, first you should contact the retailer who sold you the product and verify the services he/she can provide. If this is not possible, we will be happy to assist you!
You may return any new, unopened product for a full refund or exchange within (30) days of purchase. Special order returns are at our discretion. The total refund amount is for the cost of your product, excluding shipping. Please contact Customer Support at support@e-tintproducts.com or by visiting www.e-tintproducts.com/customersupport for a Return Merchandise Authorization (RMA) number and specific shipping instructions. Products returned for full refund must be in new condition and in original packaging (including all accessories that were included with the product), and returned to us within 30 calendar days of the issuance of the RMA. A 15% restocking fee may be charged for any accessories or components missing from the returned product. A purchase receipt **MUST** be provided with the return of any product. Products returned without an RMA will not be eligible for a refund or exchange. The shipping and duty charges for returning a product are the customer's responsibility.

Although we do not require you to register your new product, it is important to keep the following information to obtain warranty service. In the event that you would like to file a claim, e-Tint Products will require:

- **LOT NO.** Found on the retail box, above the UPC code
- **SKU NO.** Found on the retail box, above the UPC code
- **ORIGINAL PURCHASE RECEIPT**
- **FIRST & LAST NAME**
- **TELEPHONE NUMBER**
- **EMAIL & SHIPPING ADDRESS**

LIMITED WARRANTY

All CTRL™ products are warranted for six (6) months from the date of purchase against any defects in materials and workmanship. This limited warranty is valid only to the original purchaser with a proof of purchase from an Authorized Dealer that clearly shows the purchase details. If you find a defect within six (6) months after purchase, please contact Customer support at support@e-tintproducts.com and tell us what the problem is, then follow the Return Policy procedure. We will evaluate your claim and based on our findings, repair or replace any defective CTRL™ product.

Online Auction Purchases: Products purchased through online auctions (other than our primary websites) are not eligible for warranty coverage. Online auction confirmations are not accepted for warranty verification. Your exclusive remedy for breach of warranty will be the repair or replacement of the item as determined by us. This warranty does not affect the legal rights of customers under applicable state or national laws governing the sales of consumer goods.

EXCLUSIONS

The Limited Warranty set forth above applies only to CTRL™ products manufactured by or for e-Tint Products and that bear the "CTRL" trademark and logo. The Return Policy and Limited Warranty does not apply to: (a) consumable parts, such as batteries, unless damage has occurred due to a defect in materials or workmanship; (b) any defects due to accidents, improper use, improper repair, physical damage, water damage, neglect & improper fit; (c) damage caused by ordinary wear and tear; (d) scratched lenses or altered product.

EXCEPT AS SET FORTH IN THE LIMITED WARRANTY, ALL CTRL™ PRODUCTS ARE PROVIDED ON AN "AS IS" AND "AS AVAILABLE" BASIS. TO THE EXTENT PERMITTED BY APPLICABLE LAW, ALL OTHER WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, ARE EXPRESSLY DISCLAIMED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT. NO INFORMATION OR ADVICE OBTAINED THROUGH THE CTRL™, E-TINT®, OR AMI POWERSPORTS WEBSITES, OR ANY OTHER AFFIRMATION OF E-TINT PRODUCTS, BY WORDS OR ACTIONS, SHALL CONSTITUTE A WARRANTY.

IN NO EVENT SHALL THE LIABILITY IN CONNECTION WITH ANY CTRL™ PRODUCT EXCEED THE AMOUNT ACTUALLY PAID BY YOU TO PURCHASE THE PRODUCT. IN NO EVENT SHALL E-TINT PRODUCTS BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH ANY CTRL™ PRODUCT OR SERVICE. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OF CERTAIN WARRANTIES OR THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THOSE PROVISIONS SET FORTH ABOVE MAY NOT APPLY TO YOU.

This product is subject to one or more U.S. or foreign patents listed at: e-tintproducts.com/intellectualproperty

